



SAILSHADE

Practical tips for maintaining and cleaning a shade sail

Tensioning

It is your responsibility to always maintain maximum tension using the turnbuckles to prevent the sail from becoming too relaxed and to increase its useful life.

Cleaning

Regular maintenance of your shade sail facilitates cleaning. It is recommended to clean the shade sail with a simple stream of clear water, use a soft brush, soapy water and rinse well. Never use detergents or chemical products. It is strongly discouraged to use a high-pressure cleaner to wash your shade sail. Then let it dry in the open air. To remove grease stains, use soapy water.

Arrangement

Shade sails can be mounted in the spring and dismantled in the fall. Although the shade sails are strong, they are not made to hold snow or freeze. It is advisable to remove shade sails when winds are over **100km / h**, all fasteners (turnbuckles), allows you to quickly remove your sails without the need for outside help.

Before storing your shade sail, make sure it is completely dry to avoid damaging it with mold. Also make sure the shade sail is stored away from rodents and other pests, preferably in a protective bag.

WARNING : It is not advisable to install your shade sail over a barbecue, do not expose your shade sail to a source of heat (fire and sparks) or to a gas fireplace (flames). Precautions must be taken to prevent products containing bleaches, sulfur or halogens from coming into contact with your shade sail. These can attack the fibers in the shade sail, thus reducing the life of the product and voiding the warranty.

If these steps are not followed as outlined above, iD Zen cannot be held liable for the defects caused by incorrect installation and warranty of the sail materials is void. Furthermore, iD Zen cannot be held liable for any defects in the installation hardware that has been provided or purchased by the customer.